



# Default SightMonitor username and password?

Last Modified on 12/19/2019 11:19 am EST

SightMonitor default credentials are:

Username: *chief*

Password: *change*