



Setting Up SightTracker with Axis Q8685 PTZ

Last Modified on 03/12/2020 4:05 pm EDT

To setup your Axis Q8685 PTZ with SightTracker, do the following:

- Create an ONVIF account in AXIS Q8685 (do not connect SightTracker to AXIS yet)
- Set NTP server in AXIS Q8685 and add to Genetec as ONVIF
- Set NTP in SightTracker
- Connect SightTracker to AXIS (enter AXIS's ONVIF credentials in SightTracker's Configure/PTZ tab)
- Calibrate SightTracker and Associate with SightSensor
- Perform a Follow-Test to verify