



# When does the SightSensor's heater turn on?

Last Modified on 06/17/2020 3:48 pm EDT

The window heater, which is powered by 24V A/C only, automatically starts when the temperature is between 5°C and 0°C and ramps up to 20 watts (100%) by the time it gets to -20°C.

Note that you can disable the heater from starting automatically (it's enabled by default) by changing the **Enable Heater** option in the Device page in WebConfig.